

# BFG 800 Watt Power Supply

## BFGR800WPSU

### Installation:

1. Unplug the power cord from your existing power supply.
2. Open your system case (please refer to the manual that came with your system or case).
3. Locate each power connector in use by the motherboard and peripherals such as DVD-ROMs, graphics cards, hard drives, floppy drives, etc. Unplug power from each device, keeping track of each connection as you will need to re-connect them after installing your new BFG power supply.
4. Remove the screws holding your existing power supply in place – be careful to support the power supply as it comes loose so it does not cause damage to any components.
5. Insert your new BFG power supply, lining up the mounting holes and tighten the screws.
6. Locate the matching power connector to each of the components you disconnected in step 3 and determine which power supply connector will reach each component. Careful planning here can avoid the “jumbled wire” look.
7. Connect power to the motherboard and each component requiring power.

**Note: 4-pin peripheral connectors have a flat bottom and angled edges on the opposite side and will only fit one way. Never force the connectors together as permanent damage may occur!**

8. Close your system case.
9. Plug the power cord into your new BFG power supply and power up your system.

If you have any installation problems please contact our technical support which is available 24 hrs 7 days a week. In the US and Canada call toll-free 1-866-BFG-FIXX (234-3499). Outside the US call (toll call, charges apply) 00 + 1-630-637-2459. E-mail at [support@bfgfixx.com](mailto:support@bfgfixx.com)



**[BFG Tech]**