 


The TV Guardian Set up Menu

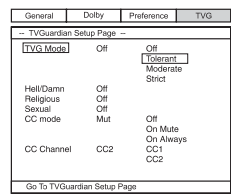

TV Guardian (TVG) filters out objectionable language by monitoring the closed captioning (CC) information contained on the DVD. It also offers various levels of filtering and is easily adjustable with simple on-screen menus.

TVG Mode

You can select various levels of offensive language filtering

OffNo filtering

Tolerant ...Filters only the most offensive foul language

Moderate ...Increased standards for language filtering.

StrictFilters out all common offensive language

Word Subset Filtering

In addition to the main TV Guardian Modes listed above, you can turn certain word subsets on or off according to your preferences

Hell/Damn ...Filters out variations of "Damn" and "Hell"

ReligiousFilters out reference to deity.(To watch religious programming, turn this word subset off.)

SexualFilters sexually explicit language.

CC Mode

On Mute (Default)Captions are displayed when offensive language is being filtered.

On alwaysCaptions are displayed continuously.

CC Channel

To use the TVG captioning features while watching a DVD Movie, your television must be capable of displaying closed captions. Make sure that your TV CC is set to "CC1" or "CC2"(Close caption on channel 1 or 2), and that the CC channel on your DVD player is set to "CC1" or "CC2" respectively(CC2 is the default setting.)

Additional Information

Troubleshooting

The appliance does not switch on.

- Make sure it is plugged into a mains socket.
- Press the \cup button on the remote control or the POWER button on the front of the appliance.

It is impossible to read the disc.

- Insert the disc with the printed side facing up.
- Check that the disc can actually be played by this device (see below).
- Check that the disc's regional code matches the player's regional code.This player's regional code is 1.
- Clean the disc (see below).

There is no picture.

- Check you have switched on the TV set.
- Check the connections.
- Select theAV input assigned to the player on the TV.

The picture is of poor quality (with snow or lines).

- Check the connections.
- **There is no sound or the sound is of poor quality.**
- Check the connections.
- Turn on the audio equipment connected to the player, if any.

The remote control does not work or works only intermittently.

- Check that batteries are inserted or change them.
- Aim the remote control at the appliance.The infrared beam must not be blocked or interrupted.

The subtitles do not appear.

- Check that the DVD disc provides subtitles.
- Refer to the section on how to display subtitles.

The disc menu language is not the correct one.

- The disc menu language has not been set up.
- The language of your choice is not available on the disc.

You have forgotten your password (Parental control).

- Open the disc tray, press CLEAR and then enter 00001 with the numeric buttons.Turn off the player and then turn it on again.

Precautions Use

- If your appliance has been stored in a cool place for any length of time, during a journey for example, wait for about 2 hours before using it. .



DVD Player User's Guide DRC247N



Changing Entertainment.Again.

A THOMSON BRAND

 
FCC INFORMATION

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules.These limits are designed to provide reasonable protection against harmful interference in a residential installation.This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions,may cause harmful interference to radio communications.However, there is no guarantee that interference will not occur in a particular installation.If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect this equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

The Shock Hazard Marking and Associated Graphical Symbol is provided on the bottom panel of unit Refer to the identification/rating label located on the back panel of your product for its proper operating voltage.



Caution: To prevent electric shock, match wide blade of plug to wide slot, fully insert
Attention: Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

CLASS I LASER PRODUCT

Product Registration: Please fill out the product registration card (packed separately) and return it immediately. For U.S. customers:Your RCA Consumer Electronics product may also be registered at www.rca.com/productregistration. Registering this product allows us to contact you if necessary.

Keep your sales receipt to obtain warranty parts and service and for proof of purchase.Attach it here and record the serial and model numbers in case you need them.The numbers are located on the back of the player.

Model number: _____ Serial Number: _____

Purchase date: _____

Dealer address and phone: _____

WARNING:To reduce the risk of fire or shock hazard, do not expose this DVD player to rain or moisture.No objects filled with liquids, such as vases, shall be placed on the apparatus.

CAUTION:FCC Regulations state that unauthorized changes or modifications to this equipment may void the user's authority to operate it.

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights.Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited consumer uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited."

CAUTION:THIS PRODUCT UTILIZES A LASER.USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

This DVD player is designed and manufactured to respond to the Region Management Information. If the Region number of a DVD disc does not correspond to the Region number of this DVD player, this DVD player cannot play the disc.The Region number for this DVD player is Region No 1.

 
Apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

Connections and Setup

Some points to check before you connect your TV set

- Ensure that the mains supply in your house complies with that indicated on the identification sticker located on the back of your appliance.
- Install your appliance horizontally, away from any source of heat (fireplace) or appliances generating strong magnetic or electric fields.The components of this appliance are sensitive to heat.The maximum ambient temperature should not exceed 35° Celsius.
- Leave sufficient space around the appliance to allow adequate ventilation: 10 cm on either side and at the back, as well as 7 cm above it are ideal.
- The humidity of the room should not exceed 75%. If you have to use the appliance outdoors, do not expose it to rain or splashing water.The appliance should not be exposed to dripping or splashing and no objects filled with liquids, such as vases, should be placed on top of it.
- Moving it from a cold environment to a warm one is likely to cause condensation on some components inside the appliance. Let the condensation disappear of its own accord before turning the appliance on again.
- Before moving the player, make sure the disc tray is empty.

The Remote Control

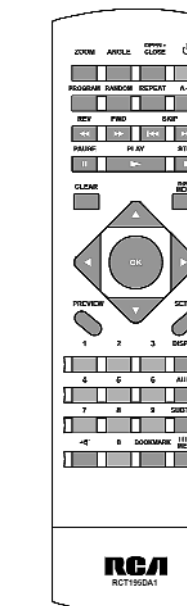


- ZOOM ANGLE** To access the Zoom function.
- OPEN-CLOSE** To access the Camera angle function.
- \cup To open and close the disc tray.
- PROGRAM** To switch the appliance on and off.
- RANDOM** To access the Program menu.
- RANDOM REPEAT** To access the Random playback function.
- A-B** To access the Repeat playback function.
- REV** To access the A-B repeat playback function.
- To start reverse accelerated play and reverse slow motion.
- FWD** To start forward accelerated play and forward slow motion.
- SKIP** To start a reverse or forward search for a chapter or track.
- PAUSE** To activate freeze frame, frame advance, slow motion.
- PLAY** To start playing a disc.
- STOP** To stop play.
- CLEAR** To clear entered items in a menu.
- DISC MENU** To call the disc menu (if there is one).
- To access the PBC menu.
- AV** To navigate through the menu.
- OK** To confirm a selection
- PREVIEW** To access the Digest or the Introscan function.
- SET UP** To access the player's menu.
- 0-9** Number entry.
- DISPLAY** To display the Status menu.
- AUDIO** To change the dialogue language or audio format.
- SUBTITLE** To select a subtitle language and turn the subtitle menu on and off.
- To mute and restore the sound.
- BOOKMARK** To access the Bookmark function.
- TITLE MENU** To access the title menu of the disc (if there is one).
- To turn the PBC function on and off.

Inserting batteries in the remote control

- Insert two LR06 or AAA batteries in the remote control.
- Do not mix different types of batteries or new and old batteries. Do not use rechargeable batteries.
- In order to avoid any risk of explosion, observe the polarities indicated inside the battery compartment.
- Replace only with the type of batteries specified above. Do not dispose of them in a fire or recharge them.
- If you are not using the remote control for a long period of time, remove the batteries.

 Front panel controls

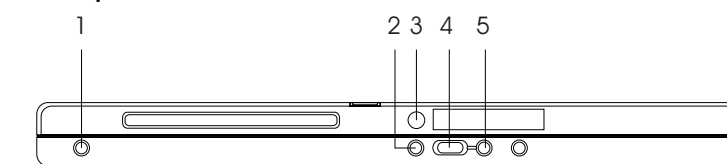


- 1. STANDBY** - To Turn on the DVD player
- 2. OPEN/CLOSE** - To open and close the disc tray.
- 3. SENSOR** - Remote sensor: Point the remote control here.
- 4. PLAY** - To start playing a disc.
- 5. STOP** -To stop disc playback.To switch the appliance on and off.

Basic connections (DVD player +TV + video recorder)

1. Connect the video recorder (or satellite receiver) to the television set as shown in the video recorder's (or satellite receiver's) user guide.
2. Connect the DVD player to the mains socket using the mains lead.
3. Switch on the devices.

Note: If one of the devices is not working, check that all the cables have been inserted properly into the sockets which they should be connected to

 Other connection options



1. Connect the audio cables to the AUDIO OUT Land R jacks on the back of your DVD player and to the corresponding AUDIO INPUT jacks on your TV.
2. Connect the video cable.
 - 2a. Basic connection — Connect the video cable to the VIDEO OUT jack on the back of your DVD player, and to the VIDEO INPUT jack on your TV.

 
-OR-

- 2b S-Video (not shown) — If your TV has an S-Video jack, connect the S-Video cable (not provided) to the S-VIDEO on the DVD to the S-VIDEO of your TV.

Note: If your TV doesn't have Audio and Video Input jacks and only has an RF jack, you need to connect an RF modulator (not provided).

Other Connection Options


COMPONENT VIDEO OUT

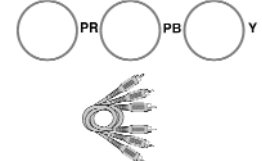

COMPONENT VIDEO OUT (Y, Pb, Pr) jacks

The Y, Pb, Pr, jacks provide optimum picture quality because the video signal is separated into three parts. To ensure maximum picture quality, use three video-grade cables (yellow) for the connection. You can also buy bundled component video cables that are color-coded to match the Y, Pb, Pr jacks (green, blue and red).

 Component Video Cables

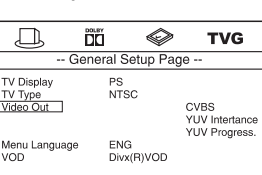


VIDEO OUT socket



VIDEO OUT socket



 AUDIO L (left) and AUDIO R (right) sockets



AUDIO L and R sockets



DIGITAL OUT COAXIAL/OPTICAL (Audio)



DIGITAL OUT COAXIAL/OPTICAL (Audio)



DIGITAL OUT COAXIAL/OPTICAL (Audio)

DIGITAL OUT COAXIAL/OPTICAL (Audio)

DIGITAL OUT COAXIAL/OPTICAL (Audio)

DIGITAL OUT COAXIAL/OPTICAL (Audio)

DIGITAL OUT COAXIAL/OPTICAL (Audio)

DIGITAL OUT COAXIAL/OPTICAL (Audio)

DIGITAL OUT COAXIAL/OPTICAL (Audio)

DIGITAL OUT COAXIAL/OPTICAL (Audio)

DIGITAL OUT COAXIAL/OPTICAL (Audio)

DIGITAL OUT COAXIAL/OPTICAL (Audio)

DIGITAL OUT COAXIAL/OPTICAL (Audio)

DIGITAL OUT COAXIAL/OPTICAL (Audio)

Frame advance (all discs except audio CD, mp3, WMA and DivX)

1. While the disc is playing, press **PAUSE** once.
2. Press the **PAUSE** button a number of times to advance forward image by image.
3. Press **PLAY** to resume normal playback.

Variable slow motion (DVD and VCD only)

1. While the disc is playing, press **PAUSE** once.
2. Press the **REV** or **FWD** button a number of times to vary the speed and direction of the slow motion.

Note: Reverse slow motion is not possible with a Video CD.
3. Press **PLAY** to resume normal playback.

Changing chapter/truck

While the disc is playing, press the **SKIP** button to go immediately to the next or previous chapter, or to the next or previous track.

For audio CD and VCD only: enter the truck number with the number buttons and then press **OK**.

Zoom (DVD, VCD and DivX only)

1. While a disc is playing, press the **ZOOM** button until you reach the zoom size you require.
2. Move from one area to another using the **◀**, **▶**, **▲** and **▼** buttons.

Note: under Zoom function for JPEG file, press ZOOM button goes to Zoom in mode, then press the REV or FWD button a number of times to vary the Zoom steps which you want then press Zoom to quit Zoom mode. I

Play modes

Repeat playback

While the disc is playing, press the **REPEAT** button repeatedly to select a play mode:

- DVD:** Repeat Chapter, Repeat Title, Repeat Off;
- VCD and audio CD:** Repeat Truck, Repeat All, Repeat Off;

A-B repeat

To repeat a sequence between two points A and B, press the **A-B** button at the beginning of the sequence you want to repeat. Then press the **A-B** button again at the end of the sequence. Then the sequence is played repeatedly until you press **A-B** to resume normal playback.

Programme playback (DVD, VCD and audio CD)

With this option, you choose and programme the playback order. You can store up to 20 tracks.

1. Insert a disc.
2. In Stop mode, press the **PROGRAM** button. The **Program** menu appears.
3. Use the number buttons to enter the title number and then the chapter number (for DVD) or the track number (for VCD and Audio CD). Repeat Step 3 us often as necessary.
4. Use the **◀**, **▶**, **▲** and **▼** buttons to select **Start** and press **OK** to start playback. Tracks are played in the order of the playback list. Playback stops once all tracks have been played.
5. Press the **STOP** button to stop the programme playback. Press the **STOP** button twice or the **OPEN/CLOSE** button to cancel the programme playback.

Random playback (all discs except DVD)

1. You can play all the tracks on the disc in a random order (chosen by the player).
1. Insert a disc.
2. Press the **RANDOM** button during playback. "Random" appears. Once all tracks have been randomly played, the player automatically stops playback.
3. Press the **RANDOM** button again to stop random playback. "Off" appears on the TV screen.

Advanced functions

Audio (DVD, VCD and audio CD)

Some discs have several audio tracks used for different languages or different audio formats. To change the language or audio format during play, press the **AUDIO** button one or more times to select one of the available audio formats or languages.

Note: This option is only available if the disc offers a number of dialogue languages or audio formats.

Bookmarks

The player can store up to 12 disc locations as long as the disc remains in the player and the unit remains switched on.

1. Press the **BOOKMARK** button during play. A menu is displayed.
2. To create a bookmark, select a free bookmark using the **◀** and **▶** buttons and press the **PLAY** button.
3. Repeat Step 2 us often as necessary.
4. To start playback from a bookmark, press the **BOOKMARK** button, select the bookmark using the **◀** and **▶** buttons and then press the **PLAY** button.
5. To delete a bookmark, press the **BOOKMARK** button, select the bookmark using the **◀** and **▶** buttons and then press the **CLEAR** button.

To exit the bookmark function, press the **BOOKMARK** button again.

Status menu

Press the **DISPLAY** button a number of times during playback to show in turn:

- DVD:** Title elapsed time, Title remaining time, Chapter elapsed time, Chapter remaining time, Display Off.
- VCD and audio CD:** Single elapsed time, Single remaining time, Total elapsed time, Total remaining time, Display Off.
- mp3 and DivX:** Single elapsed time, Single remaining time.

PBC (VCD)

The Playback Control function offers scenes and information which can be selected interactively via a menu. It can also be used to display high-resolution pictures, if the disc contains any. Press the **DISC MENU** button to access the PBC menu and the **TITLE MENU** button to turn the PBC function on and off.

Preview (DVD and VCD)

1. Press the **PREVIEW** button during playback to display the **Digest** menu. It includes various options depending on the type of disc:
 - VCD:** Title Digest, Chapter Digest, Title Interval, Chapter Interval and Bookmark Digest;
 - DVD:** Track Digest, Disc Interval and Track Interval.

2. Select one of the digest types:
 - **Title Digest/Chapter Digest/Track digest:** shows a digest of all titles/chapters/ tracks available on the disc.
 - **Title/Chapter/Disc/Track Interval:** shows a digest of the current title/chapter/disc/ truck in 10 minutes interval.
 - **Bookmark Digest:** shows a digest of all bookmarks created on the disc.

3. To display the next page, press the **▶▶** button or select **Next** in the menu and press **OK**. To start playback from a particular title, chapter, truck, interval or bookmark, select it using the **◀**, **▶**, **▲** and **▼** buttons and press **OK**, or input the corresponding number in the **Select** box and press **OK**.

To return to the digest menu, select the **Menu** button, and press **OK**.

To leave the digest menu, select the **Exit** button and press **OK** or press the **PREVIEW** button again.

IntroScan (audio CD)

This option plays the first five seconds of each track.

Press **PLAY** to start playback, then the **DISPLAY** button to display the Single elapsed time and then the **PREVIEW** button to start the IntroScan. Press **PLAY** to continue playing the current track.

Playback of mp3, WMA, JPEG and DivX files

mp3 is an audio file format which compresses recorded music. It was developed in collaboration with **THOMSON**. The main advantage of the mp3 format is that it means CD-quality music tracks can be stored on a personal computer in user-friendly compressed files. **WMA** (Windows Media Audio) is another audio file format developed by Microsoft. **JPEG** files are image files. Make sure that they have a resolution of less than 5 megapixels. Your player is an Official DivX Certified product that plays DivX®S, DivX®4, DivX®3, and DivX®VOD video content, in compliance with DivX Certified™ technical requirements.

Displaying JPEG files or playing mp3 or WMA or DivX files

Before inserting a disc, check that it is compatible with the player

1. Open the tray by pressing the **OPEN/CLOSE** button.
2. Place the disc with the printed side facing up and close the tray. The disc's contents are displayed.
3. Select a folder using the **▲** and **▼** buttons on the remote control, then press **OK** to see the folder's contents.
4. Select a file using the **▲** and **▼** buttons on the remote control, then press **OK** to start playback.
5. Press the **STOP** button to stop playback.
6. To go back to the folder list, press the **◀** button in stop mode.

Note: During playback you can use the SKIP ▶▶ or SKIP ▶▶▶ button to go back to the previous file or go on to the next one.

Playing JPEG and mp3 music files at the same time

You can display JPEG files while listening to mp3 music files recorded on the same disc.

1. Insert the disc containing the two types of file in the player
2. Select an mp3 music file using the **▲** and **▼** buttons, then press **OK** to confirm your selection.
3. Then select a JPEG image file using the **▲** and **▼** buttons, then press **OK** to confirm your selection.

Note: To delete year selection, press the CLEAR button.

4. Press **OK** to start playing the two files at the same time.
5. Press the **STOP** button to stop playback.

To rent (or purchase) DivX®VOD files

DivXVOD files are downloaded after paying a rental from certain commercial websites. Prior to downloading VOD you need to input the registration number of your DVD player on the purchase form on the site.

Note: If you cannot play a DivXVOD file recorded on a CD-R disc after downloading it, the rental period allocated during purchasing from the website may have expired. It is also possible that the recorded file is not compatible with your player because of different version or incorrect download parameters. The parameters used when copying to CD-R may be another reason for this. Since it is not possible here to supply all the information, parameters and advice relating to the use of DivX VOD files, we recommend that you visit specialist websites such as www.divx.com/vod.

DivX subtitle

In order to display properly subtitle in some language, you need to select the correct character set. During DivX playback, press several times the TITLE/MENU button on the remote control to choose a character set.

Repeat playback

While the disc is playing, press the **REPEAT** button repeatedly to select play mode: JPEG, mp3 and WMA: Repeat One, Repeat Folder, Folder (mOff), DivX: Repeat One, Repeat All, Repeat Off.

Programme playback (mp3 and WMA)

1. Insert a disc.
2. Use the **◀**, **▶**, **▲** and **▼** buttons to select the file you want to add to the playback list and press the **BOOKMARK** button. Repeat this step as often as necessary.
3. Press the **PROGRAM** button to display the playback list and press **PLAY** to start playback.

Files are played in the order of the playback list. Playback stops once all files have been played.

To delete a file from the list, press the **PROGRAM** button, use the **▲** and **▼** buttons to select the file from the playback list and press **BOOKMARK** no delete it.

 
4. Press the **OPEN/CLOSE** button to delete the playback list.

Player menus

Using the player's menus

Press the **SET UP** button to display the player's main menu. Select a menu icon using the **◀** and **▶** buttons. Then select one of the available options using the **▲** and **▼** buttons. Press the **▶** button to access the submenu and use the **▲** and **▼** buttons to select an option. Then press **OK** to confirm your selection. Return to a previous menu using the **◀** button. To exit from the player menus, press the **SET UP** button again.

The General Setup menu

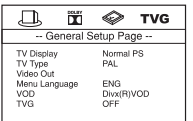

TV Display

Depending on the format of the DVD disc, you run choose the picture format best suited to the format of your TV screen.

Selects format using the **▲** and **▼** buttons and press **OK** to confirm:

- Normal/PS:** reproduces a 4:3 picture without distortion.
- Normal/LB:** gives best reproduction of pictures recorded in this format (i.e. with horizontal bands at the top and bottom of the screen) or in 16:9.

Widescreen;

reproduces 16:9 format films in full on a 16:9 screen.

TV Type

In addition to PAL DVDs and VCDs, you can enjoy NTSC films as well (a 50Hz or 60Hz PAL compatible TV set is required). If the pictures from the DVD being played appear in black and white on your screen, try changing the colour standard.

Set the function to **PAL** or **NTSC** and press **OK** to confirm.

 
Menu Language

To change the language of the player menus, choose the language using the **▲** and **▼** buttons and press **OK** to confirm.

VOD

Refer to "To rent (or purchase) DivXVOD files".

The Dolby Digital Setup menu

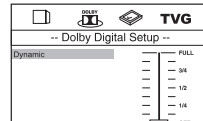


Note: The Dolby and the double-O symbol are trademarks of Dolby Laboratories. Manufactured under license from Dolby Laboratories.

Dynamic

You can use this function to control the different sound levels via dynamic compression. It improves the quality of the sound track at a low volume and quietsens the loudest sounds. Select an option using the **▲** and **▼** buttons, and press **OK** to confirm.

Note: The function is available only on DVD discs recorded in Dolby Digital.

 The Preferences Setup menu

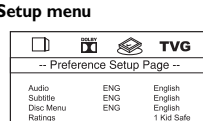

Note: The Preference Setup menu is not available when viewing a disc in shy player.

Audio

To change the dialogue language, choose the language using the **▲** and **▼** buttons and press **OK** to confirm.

Subtitle

To change the subtitle language, choose the language using the **▲** and **▼** buttons and press **OK** to confirm.

Disc menu

To change the language of the disc menus, choose the language using the **▲** and **▼** buttons and press **OK** to confirm.

Ratings

You can control access to the player and the type of discs your family can watch with the rating function. There are eight levels of parental control.

Note: The disc publisher is responsible for coding scenes according to the rating. In Europe, very few discs have coded scenes.

1. Select the rating level using the **▲** and **▼** buttons.
2. Press **OK** no enter the Password Setup menu.

Note: To access the Ratings submenu, you must input a four-digit pin number. If you have not chosen an yet you can prepsaid se de se when you try se access it (see eppen Password).

Password

This option allows you to set or change the password.

1. Press **OK** to enter the Change Password menu.
2. To change the password, enter the current four-digit password in the "Old Password" box. Then enter the new password in the "New Password" box. You are then prompted to enter it again in the "Confirm Password" box to confirm and press **OK**.

Note: Password is not defined until you set it.

- The openings located on the top and bottom are for ventilation and must not be obstructed.
- During thunderstorms, we recommend that you isolate the appliance from the electrical supply so that it is not damaged by electrical or electromagnetic surges.
- This appliance is designed for continuous use. Switching off the DVD player to stand-by mode does not disconnect it from the mains supply. To completely isolate the equipment, remove the plug from the mains socket as some components remain connected to the electrical supply.
- If you notice any burning or smoke, disconnect the appliance immediately to avoid any risk of electrocution.
- Do not attempt to look inside the appliance through the disk tray opening or any other opening. You may be electrocuted or exposed to laser radiation.
- This appliance is for domestic use only and must not be used for industrial purposes.
- Total or partial copying of recordings, protected by copyright legislation, without the explicit permission of the holder of the rights, contravenes current legislation. Copying or downloading music files for sale or any other business purpose constitutes or could constitute a violation of copyright law.

Cleaning

- Use a soft, dry, clean cloth. Regularly dust the vents at the back or sides.
- Using solvents, abrasive or alcohol-based products risks damaging the appliance.
- If an object or liquid enters inside the appliance, unplug it immediately and have it checked by an authorised technician.

Handling and caring for discs



- Handle your discs with care. Hold the disc with your fingers at the edges or through the hole.
- Insert the disc with the label facing up (for a single-sided disc).
- Place the disc properly into the tray in the allotted holder.
- Use a soft cloth to clean discs if necessary, always wiping from the centre to the edge.
- Always put discs back in their cases after use and store in a vertical position.
- Do not close the tray with two discs in it or with a disc not sitting correctly in the holder.
- Do not play cracked, chipped or warped discs nor try to repair them with adhesive tape or glue.
- Do not write on a disc.
- Do not move the player when a disc is being played.
- Do not scratch discs or store them in places exposed to direct sunlight, high humidity or high temperatures.
- Do not use aerosol cleaners, benzene, anti-static liquids or any other solvent for cleaning discs. When cleaning, wipe gently with a soft damp (water only) cloth from the centre to the edge, avoiding circular motions, which could cause scratches and interference during playback.

Guarantee

- The type and production number of your appliance are printed on the guarantee certificate supplied with your appliance. Keep this certificate as well as the invoice. These documents are required in the event of claiming your guarantee rights.
- All repairs during the guarantee period must be carried out by an authorised engineer for our brand. If this condition is not met, your rights will no longer be valid.
- Never open the appliance yourself, since this may put you at risk or damage the equipment. THOMSON does not accept any liability if the appliance is used in any way other than in accordance with this manual.

DISCLAIMER OF WARRANTIES: TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, DECLARATIONS AND WARRANTIES OF NON-INFRINGEMENT OF COPYRIGHT OR OTHER INTELLECTUAL PROPERTY RIGHTS RESULTING FROM THE USE OF THE PRODUCT IN CONDITIONS OTHER THAN THOSE SPECIFIED ABOVE ARE HEREBY DISCLAIMED.

Discs you can play

In spite of progress made to ensure playability of all discs types, it is not possible to guarantee playback of discs which are not in conformity with DVD, CD, VCD or SVCD standards. This unit may not play some recordings or files on CD-R, CD-RW, DVD-R, DVD-RW, DVD+R, DVD+RW due to differences in recording formats, software used and disc types.

DVD-Video

Digital video discs - 12 cm and 8 cm, single or double sided, single or dual layer. DVDs are high-density optical discs on which high quality picture and audio are recorded by means of digital signals.

DVD-R, DVD-RW, DVD+R, DVD+RW

Most DVD-R and DVD+R (one recording only), DVD-RW and DVD+RW discs (rewritable). Depending on the DVD writer and discs used. Recordings using DVD-R and DVD-RW discs must be made in Video DVD mode. Recordings using DVD+RW discs must be made in accordance with the specifications for DVD+RW discs with a 4.7 GB capacity.

VCD - Video Compact Disc

CD on which you can record up to 74 min. of VHS-quality video associated with still images, audio tracks and interactive menus.

SVCD - Super Video Compact Disc

Most SVCDs comply with the IEC62107 standard. SVCDs can be used to record up to 70 minutes of digital sound and images in accordance with MPEG-2 standards for video and MPEG-1 standards for audio