



Warning :

Please turn off the power when inserting or removing a memory card to avoid damaging the unit or the card.

USER MANUAL



Digital Picture Frame

SP-DPF70E / SPDPF70EW

Safety precaution

- 1) Use only the supplied 12V DC power adapter.
- 2) Turn off power before cleaning. Use only a soft cloth to clean the unit. Do not use liquid cleaners.
- 3) Avoid exposing the unit to extreme heat.

Contents

Introduction.....	1
Features.....	1
Packaging Check List.....	2
Specifications.....	2
Product Diagram.....	3
Using Your Frame	5
Warranty.....	7
Troubleshooting.....	8

Introduction

- ✧ Your new digital picture frame lets you view digital pictures from memory cards easily and quickly.
- ✧ No computer or printer is needed.
- ✧ Includes convenient slide show mode, which starts automatically when the frame is turned on.
- ✧ Supports many popular memory card types.
- ✧ Easy to take with you to share photos with family and friends anywhere.
- ✧ A step beyond the traditional photo frame. View tens or even hundreds of digital photos without the need to pay for printing.

1. Features:

- 7 inch TFT LCD screen
- Supports Secure Digital (SD), Multimedia Card (MMC) Memory Stick (MS) and xD memory card formats
- View the pictures from memory cards directly
- Supports rotation of photos for proper display of vertical pictures.
- Resolution: 480x234 pixels
- Supports high resolution photos
- Automatic start of slide show
- Key holes for wall mounting
- Removable stand allows frame to be displayed vertically or horizontally

Introduction

2, Packaging Check List


* SPDPF70E or SPDPF70EW	
Digital Picture Frame	1 piece
* Stand	1 piece
* User Manual	1 piece
* Power Adapter	1 piece

3, Specifications

Panel Size	7 inches
Resolution	480 x 234
Brightness	350 cd/m ²
Contrast	300
Viewing Angle	60/60/50/40 (CR=10)
Response Time	30ms
Screen Size Mode	16 : 9
Picture Rotation	270 degrees
File Format Type	JPEG
Max. Photo Size	10 megapixels
Power Requirement	12V DC
Power Consumption	6W
Operating Temperature	-20~65 degrees centigrade
Storage Temperature	-30~75 degrees centigrade

Product Diagram

a. Top view

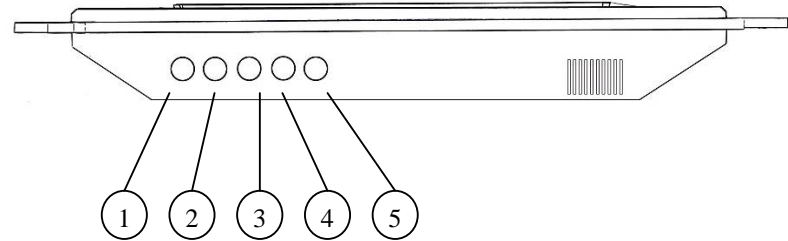


1. Play/Pause and On/Off
2. Previous
3. Next
4. Rotate
5. Mode

Using Your Digital Picture Frame

b. Side view


The removable stand can be connected to use your Digital Picture Frame vertically or horizontally.

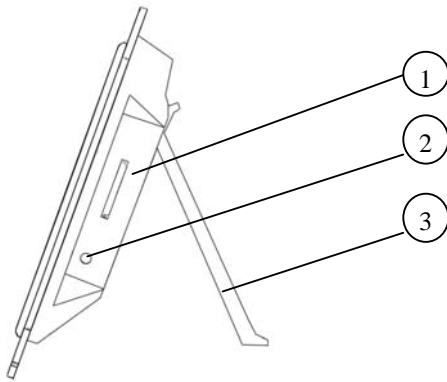




1. Memory card slot
2. Power input jack
3. Stand

Install the stand for tabletop display, or mount to a wall. Connect the AC adapter.

Insert a memory card in the digital picture frame (with the card's electrical contacts toward the back of the unit). If the power is off, press the **PLAY/PAUSE** button

 to turn the frame on. A slide show will begin automatically. To turn the frame off, press and hold the **PLAY/PAUSE** button for about three seconds.


To pause the slide show, press the **PLAY/PAUSE** button  briefly. The word **Pause** will appear on the screen briefly, and the slide show will be stopped. The current photo will remain on the screen until another button is pressed, at which time the slide show will resume.

To display the next or previous picture, press the **Next** button  or the **Previous** button .

The speed of the slide show is automatic. Photos will remain on the screen for about 5 to 20 seconds, depending on the size of the files. Larger files will take longer to load.

The **Rotate**  button allows photos to be turned for proper viewing.

Viewing Modes

The **MODE** button  allows the user to adjust how the pictures are displayed on the screen.

The modes function as follows:

NORMAL

This mode will cause your pictures to fit on the screen with no stretching or cropping of the images. Photos with a typical 4:3 or 3:2 width-to-height ratio will have black sections on the left and right sides of the screen.

CROP

This mode will cause your pictures to be enlarged to the full width of the screen, without stretching them. As a result, the top and bottom of most pictures will not be visible.

File Saving:

Photos must be saved in the JPG format in order to be viewed on the digital picture frame. Nearly all digital cameras will save in this format by default. Photos that have been saved with certain image editing programs can fail to display properly. Please refer to our web site (www.smartpartsproducts.com) for additional information.

Warranty

Smartparts, Inc. warrants its products against defects in material and workmanship for a period of 90 days from the date of purchase.

Technical Notes:

1. Your digital picture frame is a sophisticated electronic device. Do not drop or subject the unit to jarring or strong vibrations.
2. Avoid placing the digital photo frame in areas of high humidity or where it might be subjected to splashing.
4. The LCD panel is made of plastic and can be easily damaged. Avoid sharp objects.
5. Use only a soft dry cloth to clean the screen

Questions / Troubleshooting Guide

- Question:** What kind of photos does this device support?

Answer: The frame will display digital photos that are stored in the JPEG format, which is the standard format for nearly all digital cameras. Some cameras allow images to be stored as TIFF or RAW files as well as JPEG. Only the JPEG format is compatible with the frame. Photos of up to 10 million pixels can be displayed.
- Question:** What should I do if the system does not respond when the power is turned on?

Answer: Please make sure the unit is properly connected to a power source. Then turn it off, re-connect the power and turn it on again.
- Question:** Why is the memory card not recognized?

Answer: The memory card might be inserted backwards or is not pushed in far enough. After inserting the memory card in the right direction, if the card still cannot be read, please turn off the unit and then power it on again.

For additional support, please visit our web site at
www.smartpartsproducts.com.