



User Manual

Item No. 4031 | Ages 8+

Thank you for purchasing the FlyTech Dragonfly from Wowwee!

Introduction

The world's first radio-controlled flying insect. FlyTech™ Dragonfly is a fun RC flyer that's easy or challenging depending upon the skill level setting you choose - beginner or expert. An ultra-light, dual-wing design and "high-flex," crash-resistant structure make the dragonfly safe to fly anywhere, even in small indoor spaces. The FlyTech Dragonfly is an easy-to-fly aeronautical marvel that looks and sounds like a genetic hybrid of the real thing.

Designed primarily for amazing indoor flight, you can also use FlyTech Dragonfly outdoors. Its wings flap like a real dragonfly and it has a long flight duration on a single recharge.

Take a few moments to look through this user manual to get your FlyTech Dragonfly up and soaring!

Note: When using the FlyTech Dragonfly, adult supervision is required, especially when changing the batteries, or replacing the wings and/or propeller.

Package contents

This package contains:

1 x FlyTech Dragonfly

1 x Pair of spare wings


1 x Controller

1 x Spare propeller

1 x Detachable antenna

1 x Tail ribbon

Quick overview

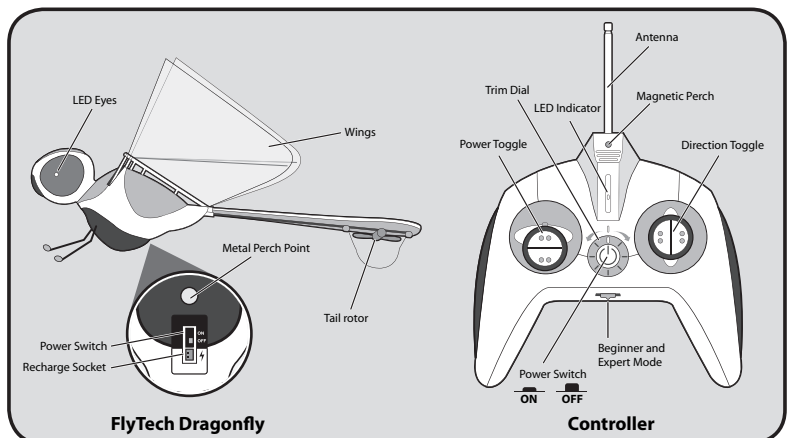


Batteries

The FlyTech Dragonfly controller requires 6 x "AA" alkaline batteries (not included). Install the batteries as follows:

Attention: Important Battery Information

- Use only fresh batteries of the required size and recommended type
- Do not mix old and new batteries, different types of batteries [standard (Carbon-Zinc), Alkaline or rechargeable] or rechargeable batteries of different capacities
- Rechargeable batteries are only to be charged under adult supervision
- Please respect the correct polarity, (+) and (-)
- Do not try to recharge non-rechargeable batteries
- Do not throw batteries into the fire
- Replace all batteries of the same type/brand at the same time
- The supply terminals are not to be short-circuited
- Remove exhausted batteries from the toy
- Batteries should be replaced by adults
- Remove batteries if the toy is not going to be played with for some time
- The packaging should be kept since it contains important information
- Rechargeable batteries are to be removed from the controller before being charged

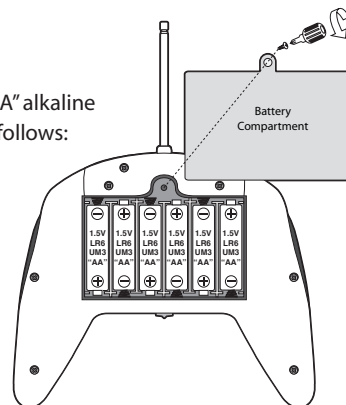

1. Open the battery compartment on the controller using a Phillips screwdriver (not included) to remove the screw on the battery compartment door.
2. Insert the batteries according to the diagram. Ensure that the positive and negative polarities match the illustrations inside the battery compartment.
3. Replace the battery compartment door and replace the screw using the screwdriver. Do not overtighten.

Antenna

You will need to attach the antenna to the controller before you can begin using the dragonfly. To do so:

- *Screw the antenna clockwise into the top of the controller (as illustrated in the diagram) until it stops turning. Do not overtighten.*



For optimal performance, fully extend the antenna on the controller before flying the dragonfly.

FCC Note:

The unique antenna provided has been authorized for use with this equipment. Installation of any other antenna is not authorised under FCC regulations. The manufacturer is not responsible for any radio or TV interference caused by unauthorised modification of the product.

SAFETY PRECAUTIONS!

- Never fly or follow the dragonfly into the streets
- Keep the dragonfly away from faces and eyes
- Do not launch at people or animals
- Use the controller charger included in this package
- Keep fingers away from the dragonfly's moving joints when the power is on
- Make sure people around you are aware you are playing with the FlyTech Dragonfly
- Do not fly near walls or ceilings
- Do not fly the dragonfly near overhead cables, trees, buildings or any other obstructions
- Do not play outdoor during thunderstorms or adverse weather conditions
- Always turn your dragonfly and controller OFF when not in use

Charging FlyTech Dragonfly

Before flying the FlyTech Dragonfly for the first time (or if you have depleted a charge on the dragonfly), you will need to recharge it. A typical charge takes about 20 minutes and allows around 7 minutes of flying time.

Note: If the charge time begins to exceed 25 minutes, you should replace all the batteries in the controller with fresh batteries.

